


Quick Start Guide

Single Office Mode

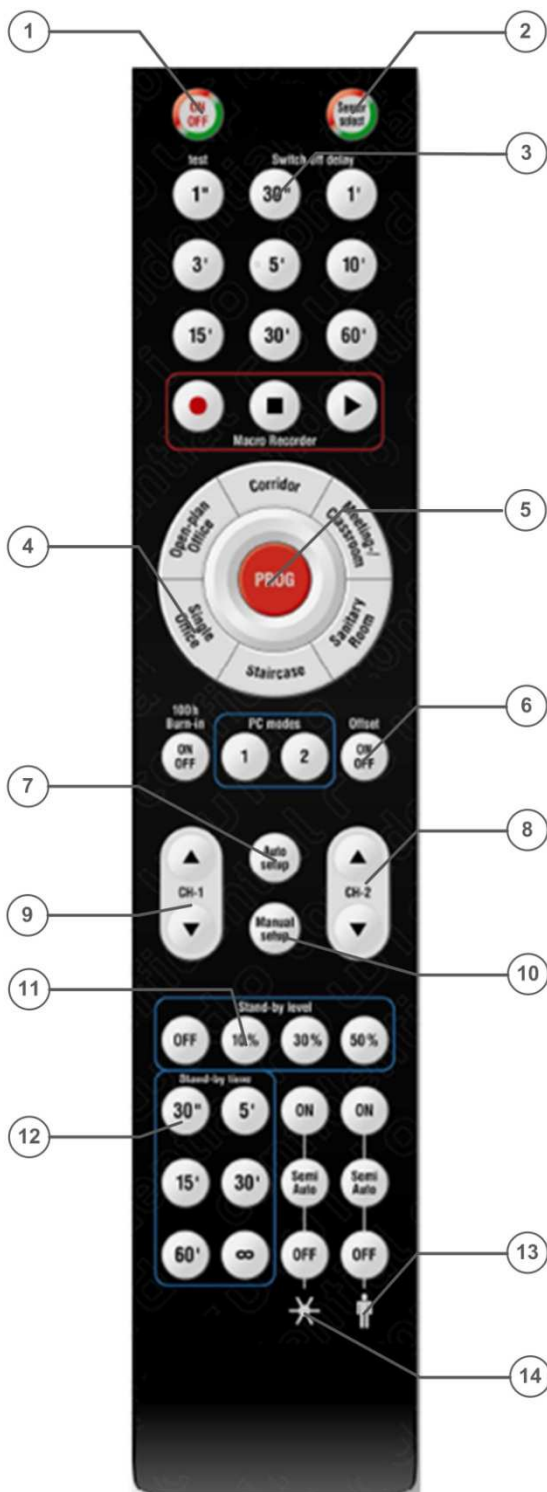

Note: Further information on the individual functions and settings can be found in the DALIeco control user guide.

Attention!: All previous settings will be replaced by the basic settings Single Office!

Step 1: Activate programming mode

Keep the programming key [5] pressed (>0.5s).
LED [1] starts flashing red.

Step 2: Select mode

Briefly press the Single-Office button [4] (<0.5s).
DALI luminaires flash 1 time.

Step 3: Daylight harvesting - save set value for daylight harvesting automatically –OR–

Activate daylight harvesting by pressing Auto setup [7].

Luminaires dim to 80% and sensor value stored as target light intensity.

Note: Set-up only in the evening/night-time with little or no daylight.

Set-up duration is about 3 min. LED [2] will flash red/green during that period.

Daylight harvesting - save set value for daylight harvesting manually

Set brightness value by pressing the buttons CH-1 [9] up/down.

Confirm by pressing the Manual setup key [10] shortly.

Daylight harvesting will be activated.

DALI luminaires flash 2 times; LED [2] will flash red/green during that period.

Note: Set-up only in the evening/night-time with little or no daylight.

Step 4: Exit programming mode

Briefly press the programming key [5] (<0.5s).

LED [1] turns off.

Note: Programming mode will exit 60s after the last key press by default.

Basic Settings Single Office:

- Light level of the two DALI channels: 80%
- Power up: By movement, push button or remote control
- Turn off: Automatic, push button or remote control
- Absence Switch-off delay time: 15min.
- Stand-by: Off
- Daylight harvesting: ON (Not active until set value is stored!)
- Offset: +30% for CH-2 (Does not show up until daylight harvesting is dimming CH-1)

Optional settings (individually configurable)

Start with long press (>0.5s) of the programming key [5]. (Start programming mode)

LED [1] starts flashing red.

Absence Switch-off delay time

e.g. Briefly press the 30sec key [3] for a delay time of 30sec.

Note: 1sec test is purely a test function (Do not use!)

Absence Stand-by-level

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

Absence Stand-by delay time

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.

Note: Not possible if Stand-by level is set on OFF.

Daylight harvesting activation/deactivation

e.g. Briefly press the Off-button [14] to deactivate daylight harvesting.

Note: Default On (See DALIeco control manual for details).

Use full automatic mode only in combination with motion detection.

Motion Sensor activation/deactivation

e.g. Briefly press the Off-button [13] to deactivate motion detection.

Note: Default ON (See manual for details).

Exit with short press (<0.5s) of the programming key [5]. (End programming mode)

LED [1] turns off.

Note: Programming mode will exit 60s after the last key press by default.

Adjust Offset (not adjustable in the programming mode)

- Briefly press the Offset key [6] to start.
- Change Offset level with the CH-2 key [8].
- Briefly press the Offset key [6] to save and end.


Note: Only available in combination with the daylight harvesting.

Offset adjustment of CH-2 only between the CH-1 value and the stored set value.

Adjust Offset with sufficient daylight only.

Quick Start Guide

Open-Plan Office Mode

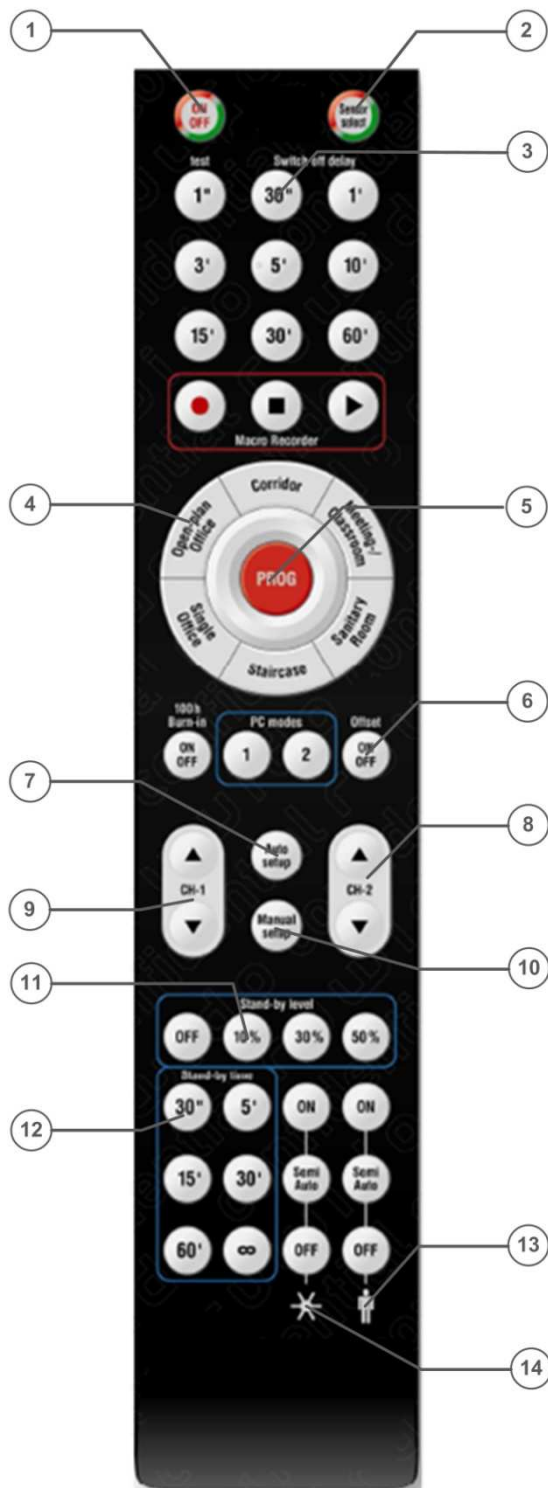

Note: Further information on the individual functions and settings can be found in the DALIeco control user guide.

Attention!: All previous settings will be replaced by the basic settings Open-plan Office!

Step 1: Activate programming mode

Keep the programming key [5] pressed (>0.5s).
LED [1] starts flashing red.

Step 2: Select mode

Briefly press the Open-plan Office button [4] (<0.5s).
DALI luminaires flash 1 time.

Step 3: Daylight harvesting - save set value for daylight harvesting automatically –OR–

Activate daylight harvesting by pressing Auto setup [7].
Luminaires dim to 80% and sensor value stored as target light intensity.
Note: Set-up only in the evening/night-time with little or no daylight.
Set-up duration is about 3 min. LED [2] will flash red/green during that period.

Daylight harvesting - save set value for daylight harvesting manually

Set brightness value by pressing the buttons CH-1 [9] up/down.
Confirm by pressing the Manual setup key [10] shortly.
Daylight harvesting will be activated.
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.
Note: Set-up only in the evening/night-time with little or no daylight.

Step 4: Exit programming mode

Briefly press the programming key [5] (<0.5s).
LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.

Basic Settings Single Office:

- Light level of the two DALI channels: 100%
- Power up: By movement, push button or remote control
- Turn off: Automatic, push button or remote control
- Absence Switch-off delay time: 15min.
- Stand-by level: 30% of the stored set value
- Absence Stand-by delay time: 60min.
- Daylight harvesting: ON (**Not active until set value is stored!**)
- Offset: +30% for CH-2 (Does not show up until daylight harvesting is dimming CH-1)

Optional settings (individually configurable)

Start with long press (>0.5s) of the programming key [5]. (Start programming mode)
LED [1] starts flashing red.

Absence Switch-off delay time

e.g. Briefly press the 30sec key [3] for a delay time of 30sec.
Note: 1sec test is purely a test function (Do not use!)

Absence Stand-by-level

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

Absence Stand-by delay time

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.
Note: Not possible if Stand-by level is set on OFF.

Daylight harvesting activation/deactivation

e.g. Briefly press the Off-button [14] to deactivate daylight harvesting.
Note: Default On (See DALIeco control manual for details).
Use full automatic mode only in combination with motion detection.

Motion Sensor activation/deactivation

e.g. Briefly press the Off-button [13] to deactivate motion detection.
Note: Default ON (See manual for details).


Exit with short press (<0.5s) of the programming key [5]. (End programming mode)

LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.

Adjust Offset (not adjustable in the programming mode)

- Briefly press the Offset key [6] to start.
- Change Offset level with the CH-2 key [8].
- Briefly press the Offset key [6] to save and end.

Note: Only available in combination with the daylight harvesting.
Offset adjustment of CH-2 only between the CH-1 value and the stored set value.
Adjust Offset with sufficient daylight only.

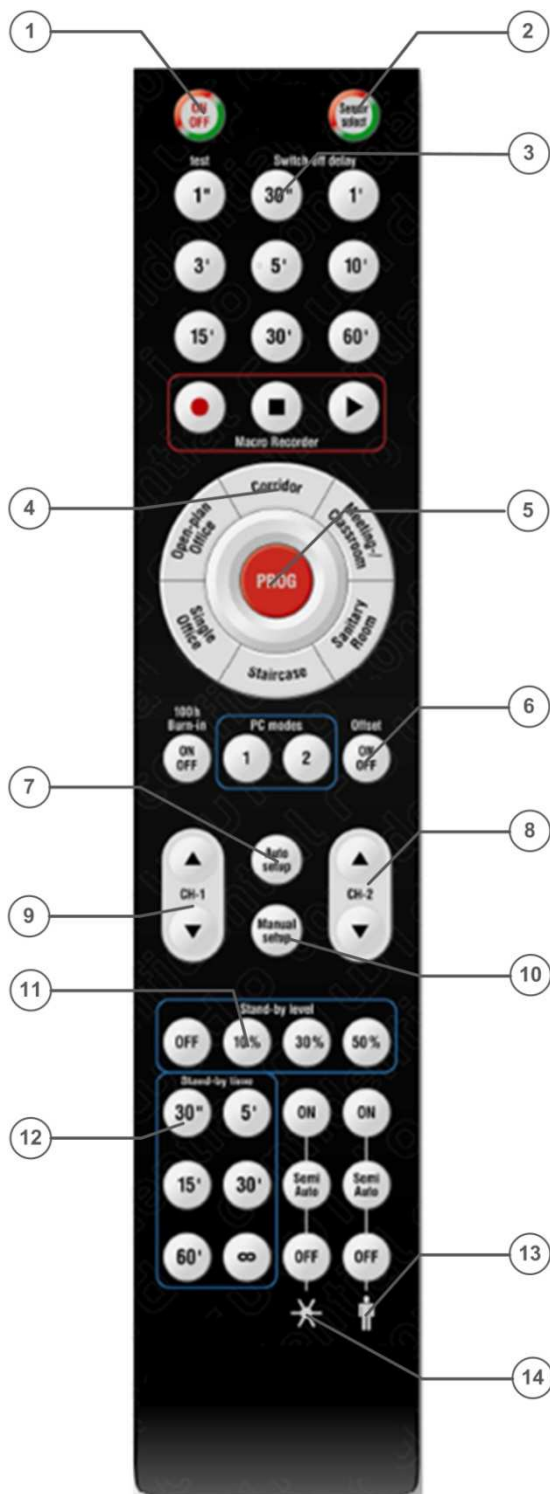

Attention!: All previous settings will be replaced by the basic settings Corridor mode!

Step 1: Activate programming mode

Keep the programming key [5] pressed (>0.5s).
LED [1] starts flashing red.

Step 2: Select mode

Briefly press the Corridor mode button [4] (<0.5s).
DALI luminaires flash 1 time.

Step 3: Exit programming mode

Briefly press the programming key [5] (<0.5s).
LED [1] turns off.

Note: Programming mode will exit 60s after the last key press by default.

Basic Settings Single Office:

- Light level of the two DALI channels: 100%
- Power up: By movement, push button or remote control
- Turn off: Automatic before Stand-by, push button or remote control
- Absence Switch-off delay time: 5min
- Stand-by level: 10%
- Absence Stand-by delay time: permanent on
- Daylight harvesting: Deactivated
- Offset: Mode deactivated

Optional settings (individually configurable)

Start with long press (>0.5s) of the programming key [5]. (Start programming mode)
LED [1] starts flashing red.

Adapt brightness value

Set brightness value by pressing the buttons CH-1 [9] up/down.
Confirm by pressing the Manual setup key [10] briefly.
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.
Note: The value last saved will be called up when switched on again.

Absence Switch-off delay time

e.g. Briefly press the 30sec key [3] for a delay time of 30sec.
Note: 1sec test is purely a test function (Do not use)!

Absence Stand-by-level

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

Absence Stand-by delay time

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.
Note: Not possible if Stand-by level is set on OFF.

Motion Sensor activation/deactivation

e.g. Briefly press the Off-button [13] to deactivate motion detection.
Note: Default ON (See manual for details).

Exit with short press (<0.5s) of the programming key [5]. (End programming mode)

LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.


Note: Daylight harvesting can be activated additional. For details see DALIeco control user guide.

Offset can only be activated in combination with daylight harvesting.

Note: Further information on the individual functions and settings can be found in the DALIeco control user guide.

Quick Start Guide

Meeting-/Classroom Mode

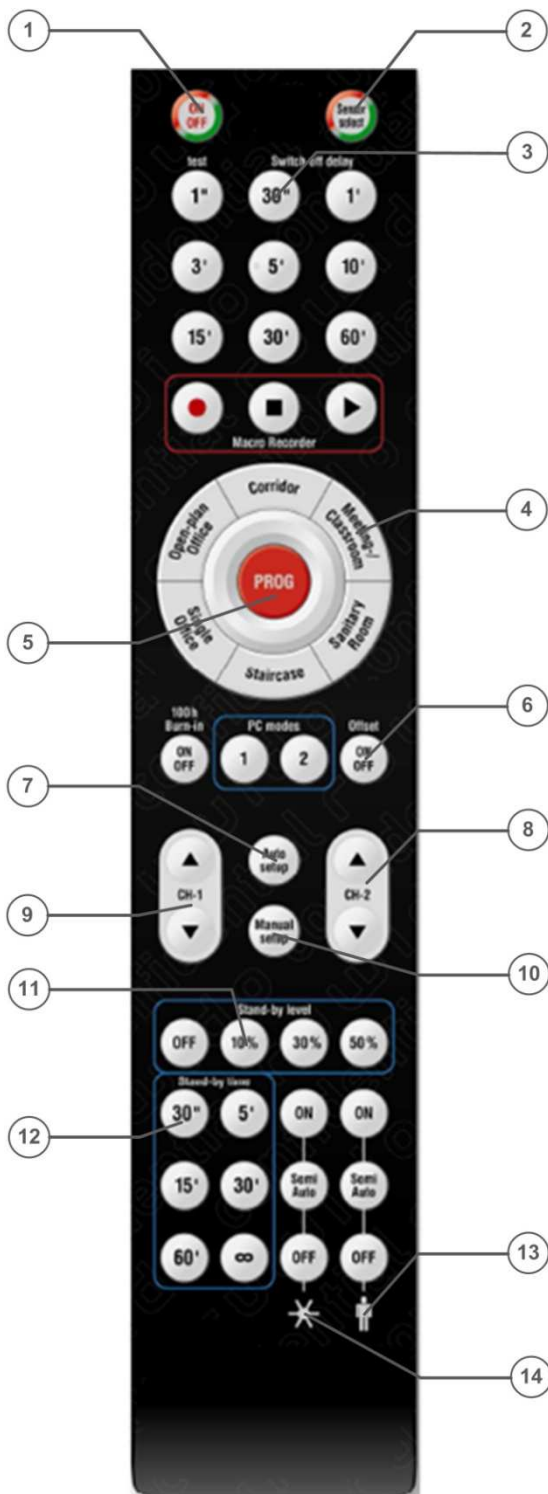

Note: Further information on the individual functions and settings can be found in the DALIeco control user guide.

Attention!: All previous settings will be replaced by the basic settings Meeting-/Classroom mode!

Step 1: Activate programming mode

Keep the programming key [5] pressed (>0.5s).
LED [1] starts flashing red.

Step 2: Select mode

Briefly press the Meeting-/Classroom button [4] (<0.5s).
DALI luminaires flash 1 time.

Step 3: Daylight harvesting - save set value for daylight harvesting automatically –OR–

Activate daylight harvesting by pressing Auto setup [7].
Luminaires dim to 80% and sensor value stored as target light intensity.
Note: Set-up only in the evening/night-time with little or no daylight.
Set-up duration is about 3 min. LED [2] will flash red/green during that period.

Daylight harvesting - save set value for daylight harvesting manually

Set brightness value by pressing the buttons CH-1 [9] up/down.
Confirm by pressing the Manual setup key [10] shortly.
Daylight harvesting will be activated.
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.
Note: Set-up only in the evening/night-time with little or no daylight.

Step 4: Exit programming mode

Briefly press the programming key [5] (<0.5s).
LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.

Basic Settings Single Office:

- Light level of the two DALI channels: 80%
- Power up: By movement, push button or remote control
- Turn off: Automatic, push button or remote control
- Absence Switch-off delay time: 15min.
- Stand-by: Off
- Daylight harvesting: ON (Not active until set value is stored!)
- Offset: +30% for CH-2 (Does not show up until daylight harvesting is dimming CH-1)

Optional settings (individually configurable)

Start with long press (>0.5s) of the programming key [5]. (Start programming mode)
LED [1] starts flashing red.

Absence Switch-off delay time

e.g. Briefly press the 30sec key [3] for a delay time of 30sec.
Note: 1sec test is purely a test function (Do not use)!

Absence Stand-by-level

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

Absence Stand-by delay time

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.
Note: Not possible if Stand-by level is set on OFF.

Daylight harvesting activation/deactivation

e.g. Briefly press the Off-button [14] to deactivate daylight harvesting.
Note: Default On (See DALIeco control manual for details).
Use full automatic mode only in combination with motion detection.

Motion Sensor activation/deactivation

e.g. Briefly press the Off-button [13] to deactivate motion detection.
Note: Default ON (See manual for details).


Exit with short press (<0.5s) of the programming key [5]. (End programming mode)

LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.

Adjust Offset (not adjustable in the programming mode)

- Briefly press the Offset key [6] to start.
- Change Offset level with the CH-2 key [8].
- Briefly press the Offset key [6] to save and end.

Note: Only available in combination with the daylight harvesting only.
Offset adjustment of CH-2 only between the CH-1 value and the stored set value.
Adjust Offset with sufficient daylight only.

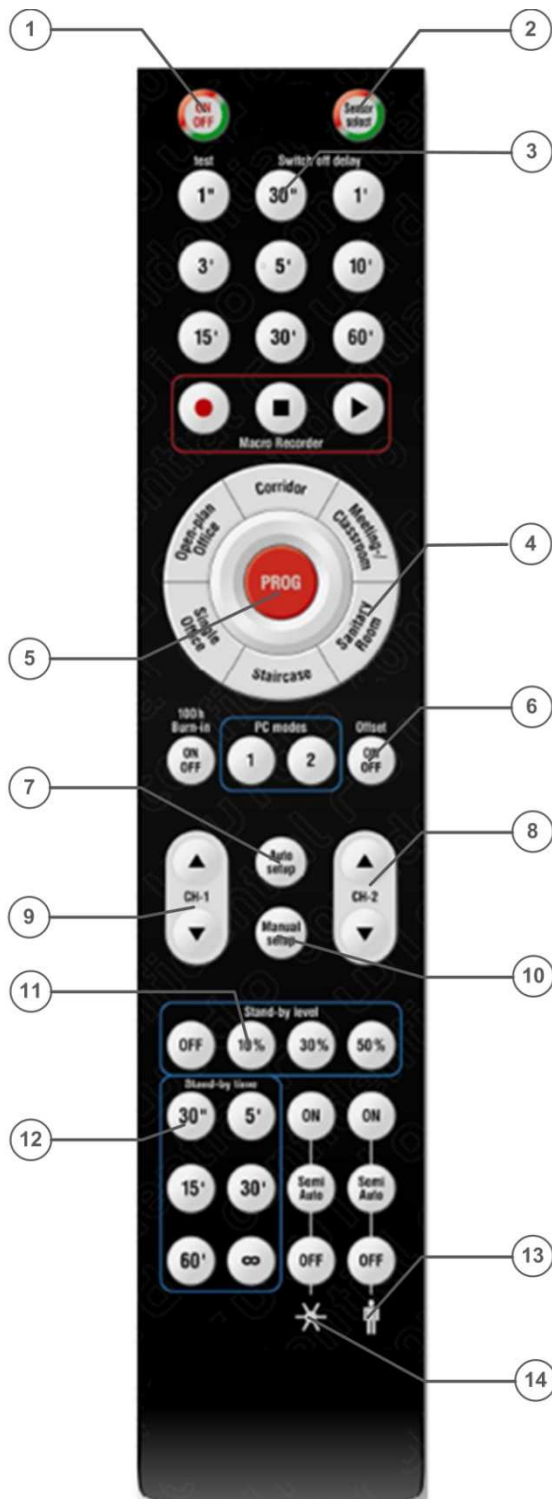

Attention!: All previous settings will be replaced by the basic settings Sanitary Room mode!

Step 1: Activate programming mode

Keep the programming key [5] pressed (>0.5s).
LED [1] starts flashing red.

Step 2: Select mode

Briefly press the Sanitary Room mode button [4] (<0.5s).
DALI luminaires flash 1 time.

Step 3: Exit programming mode

Briefly press the programming key [5] (<0.5s).
LED [1] turns off.

Note: Programming mode will exit 60s after the last key press by default.

Basic Settings Single Office:

- Light level of the two DALI channels: 100%
- Power up: By movement, push button or remote control
- Turn off: Automatic, push button or remote control
- Absence Switch-off delay time: 15min.
- Absence Stand-by delay time: 5min.
- Stand-by level: 30%
- Daylight harvesting: Deactivated
- Offset: Mode deactivated

Optional settings (individually configurable)

Start with long press (>0.5s) of the programming key [5]. (Start programming mode)
LED [1] starts flashing red.

Adapt brightness value

Set brightness value by pressing the buttons CH-1 [9] up/down.
Confirm by pressing the Manual setup key [10] briefly.
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.
Note: The value last saved will be called up when switched on again.

Absence Switch-off delay time

e.g. Briefly press the 30sec key [3] for a delay time of 30 sec.
Note: 1sec test is purely a test function (Do not use)!

Absence Stand-by-level

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

Absence Stand-by delay time

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.
Note: Not possible if Stand-by level is set on OFF.

Motion Sensor activation/deactivation

e.g. Briefly press the Off-button [13] to deactivate motion detection.
Note: Default ON (See manual for details).


Exit with short press (<0.5s) of the programming key [5]. (End programming mode)

LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.

Note: Daylight harvesting can be activated additional. For details see DALIeco control user guide.

Offset can only be activated in combination with daylight harvesting.

Note: Further information on the individual functions and settings can be found in the DALIeco control user guide.

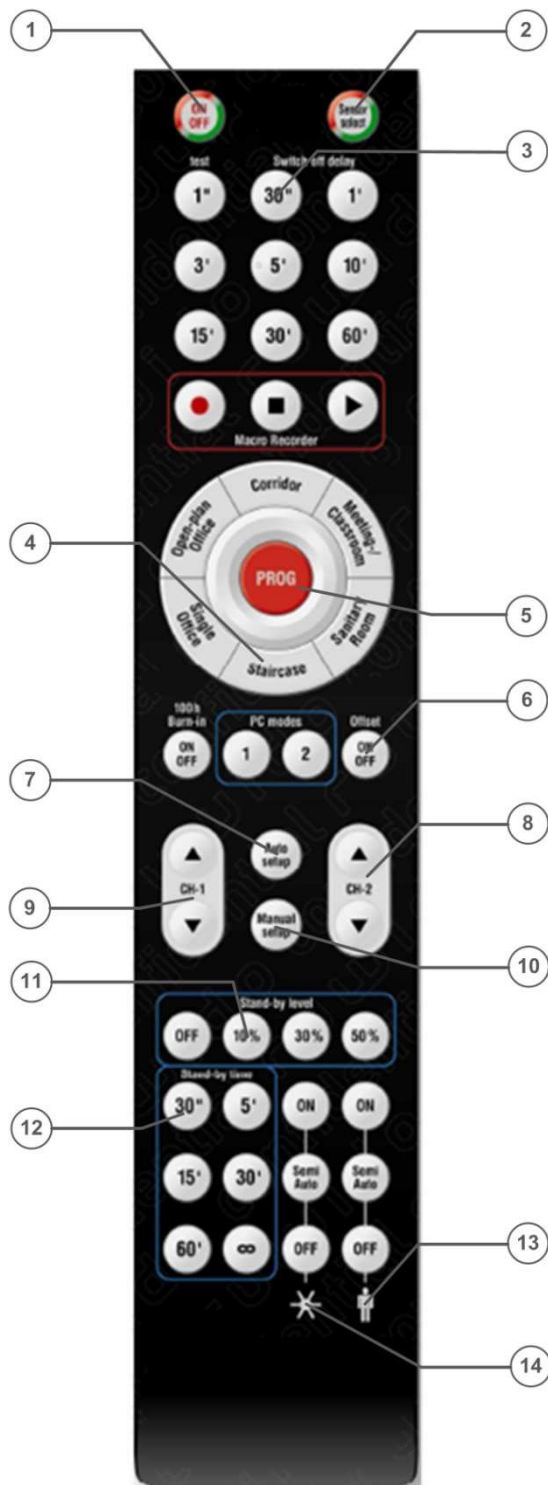

Attention!: All previous settings will be replaced by the basic settings Staircase mode!

Step 1: Activate programming mode

Keep the programming key [5] pressed (>0.5s).
LED [1] starts flashing red.

Step 2: Select mode

Briefly press the Staircase mode button [4] (<0.5s).
DALI luminaires flash 1 time.

Step 3: Exit programming mode

Briefly press the programming key [5] (<0.5s).
LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.

Basic Settings Single Office:

- Light level of the two DALI channels: 100%
- Power up: By movement, push button or remote control
- Turn off: Automatic, push button or remote control
- Absence Switch-off delay time: 5min.
- Absence Stand-by delay time: 1min.
- Standby level: 50%
- Daylight harvesting: Deactivated
- Offset: Mode deactivated

Optional settings (individually configurable)

Start with long press (>0.5s) of the programming key [5]. (Start programming mode)
LED [1] starts flashing red.

Adapt brightness value

Set brightness value by pressing the buttons CH-1 [9] up/down.
Confirm by pressing the Manual setup key [10] briefly.
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.
Note: The value last saved will be called up when switched on again.

Absence turn-off delay time

e.g. Briefly press the 30sec key [3] for a delay time of 30 sec.
Note: 1sec test is purely a test function (Do not use)!

Absence Stand-by-level

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

Absence Stand-by delay time

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.
Note: Not possible if Stand-by level is set on OFF.

Motion Sensor activation/deactivation

e.g. Briefly press the Off-button [13] to deactivate motion detection.
Note: Default ON (See manual for details).

Exit with short press (<0.5s) of the programming key [5]. (End programming mode)

LED [1] turns off.
Note: Programming mode will exit 60s after the last key press by default.

Note: Daylight harvesting can be activated additional. For details see DALIeco control user guide.

Offset can only be activated in combination with daylight harvesting.

Note: Further information on the individual functions and settings can be found in the DALIeco control user guide.